





ERGOMASTER

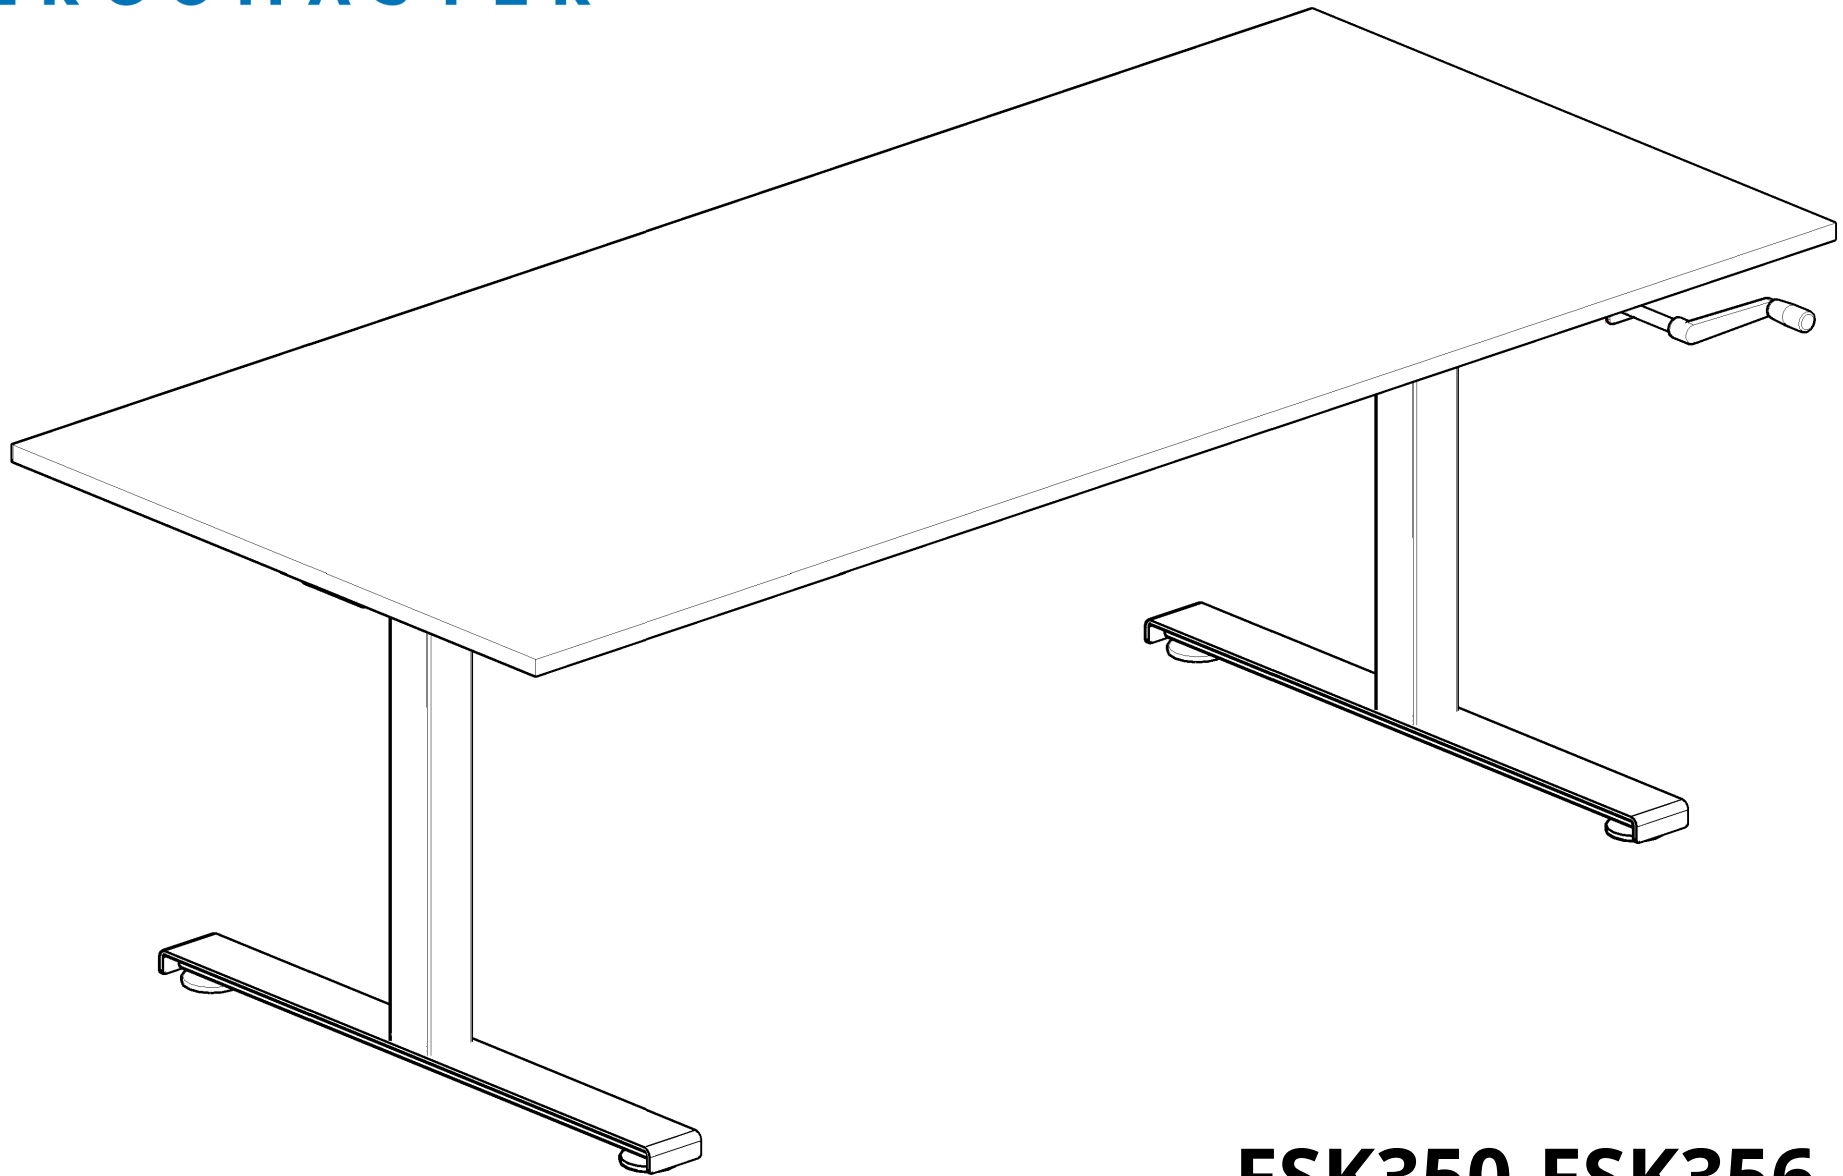


FSK350-FSK356

12-306




M6x18l

06-205



M6x15K

06-059



M8x16S

06-097



5x17W

06-090



4.5x45S

06-105




5.0x60S


1




2

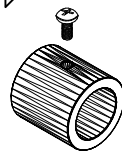


3

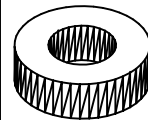


4






5

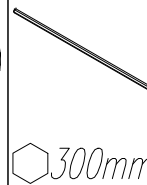


6



7

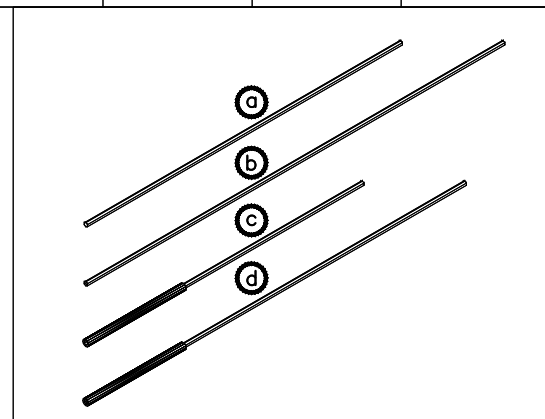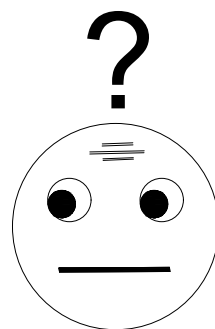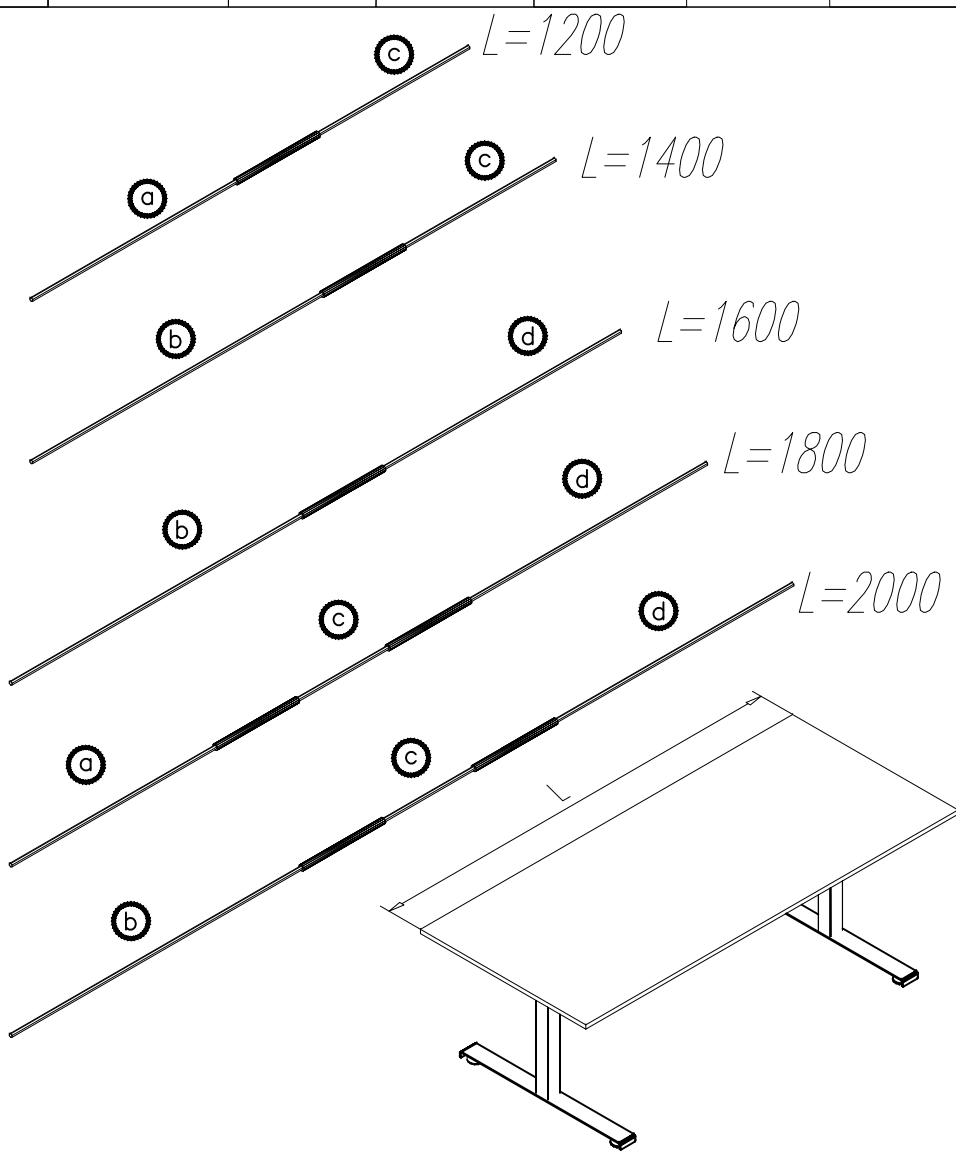






A

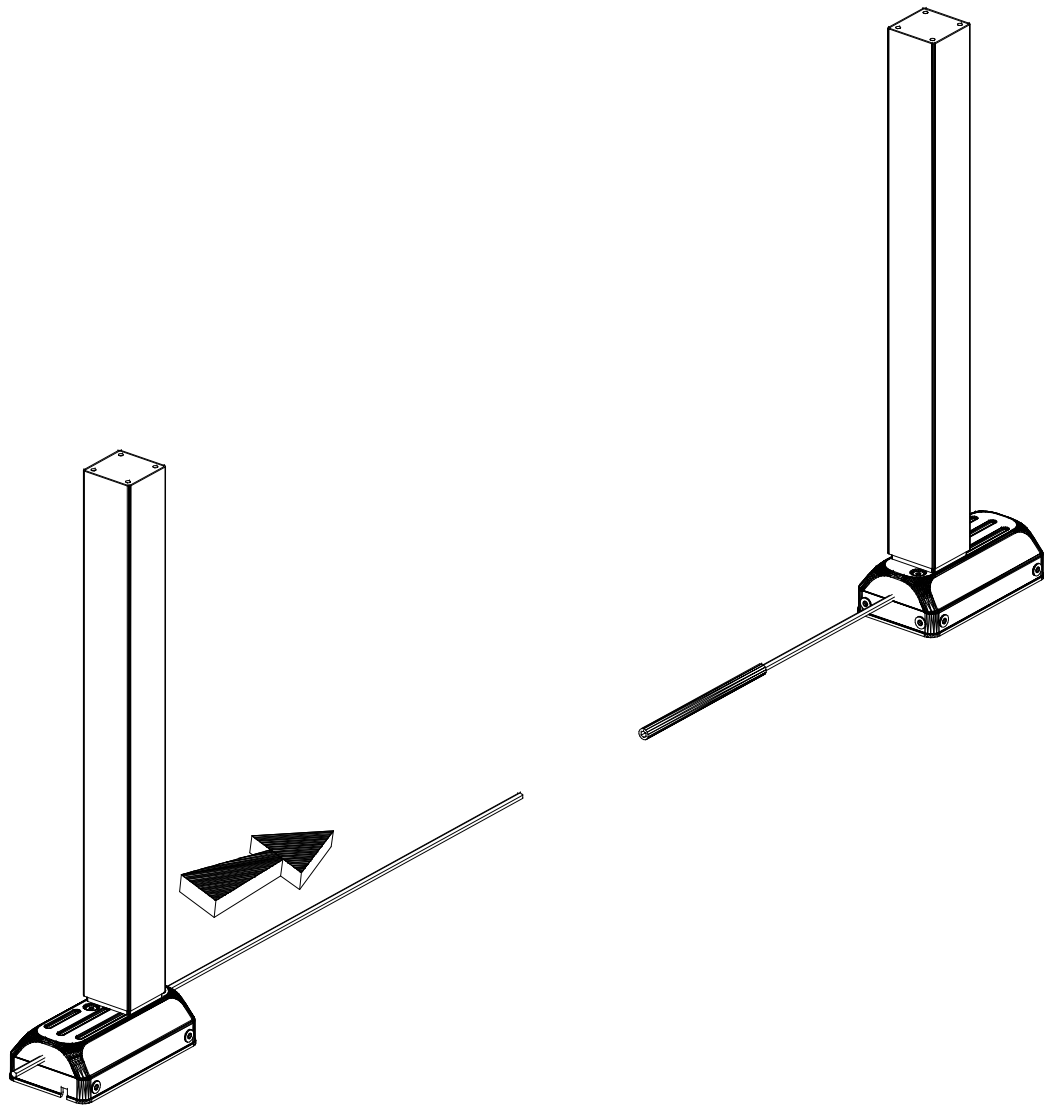

B

*Przykręcić śruby z dużą siłą.
Put the screws strongly.
Anschrauben die Schrauben
staerklich.*

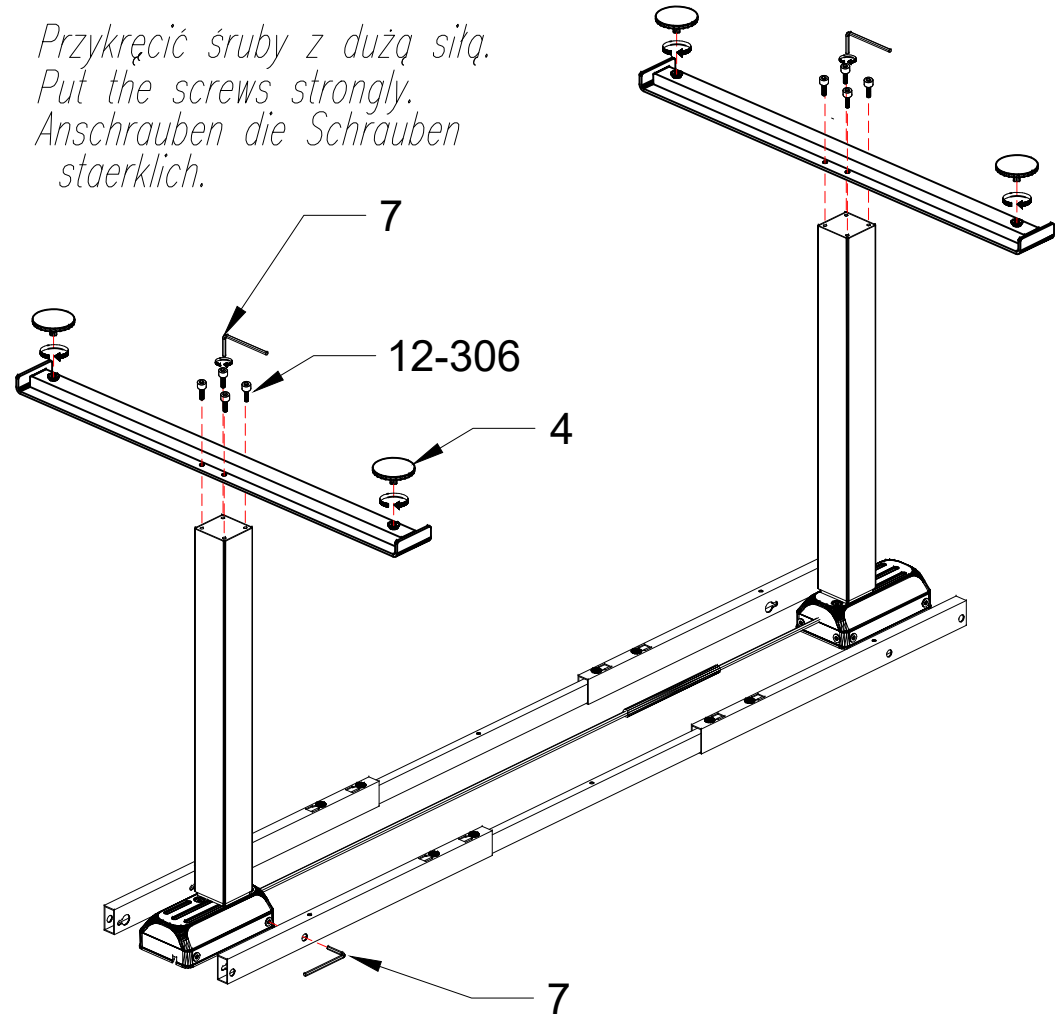

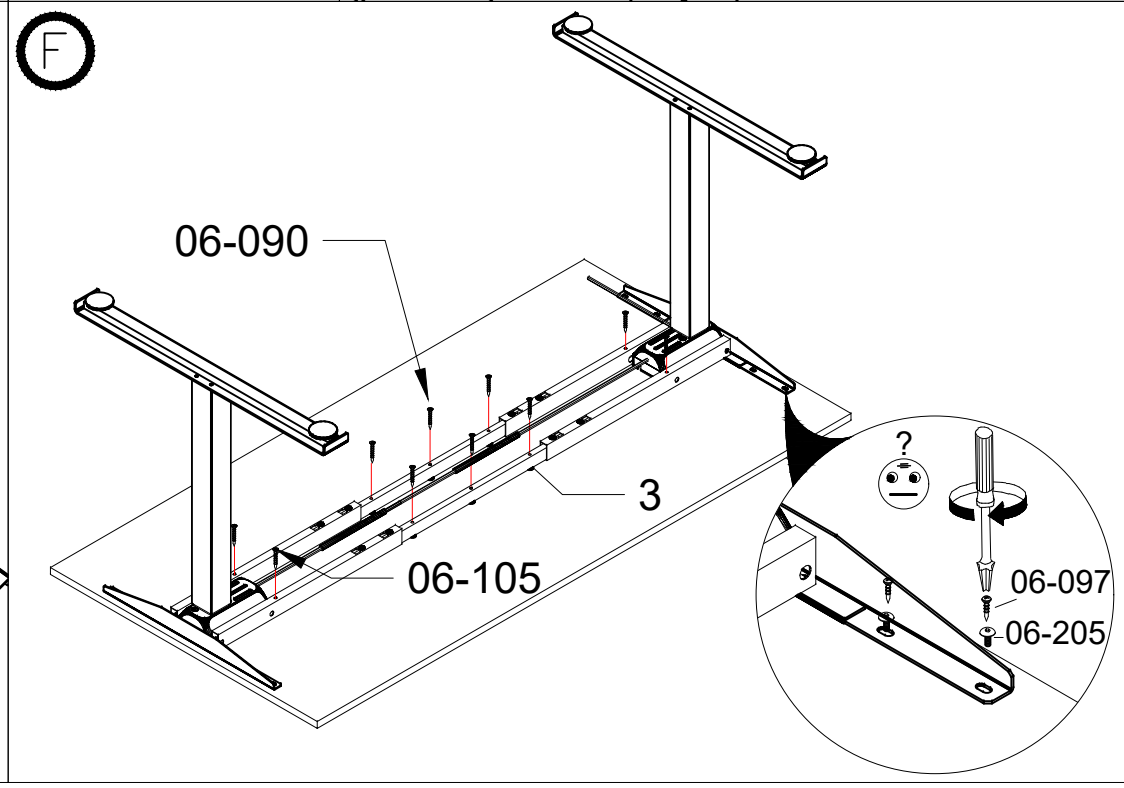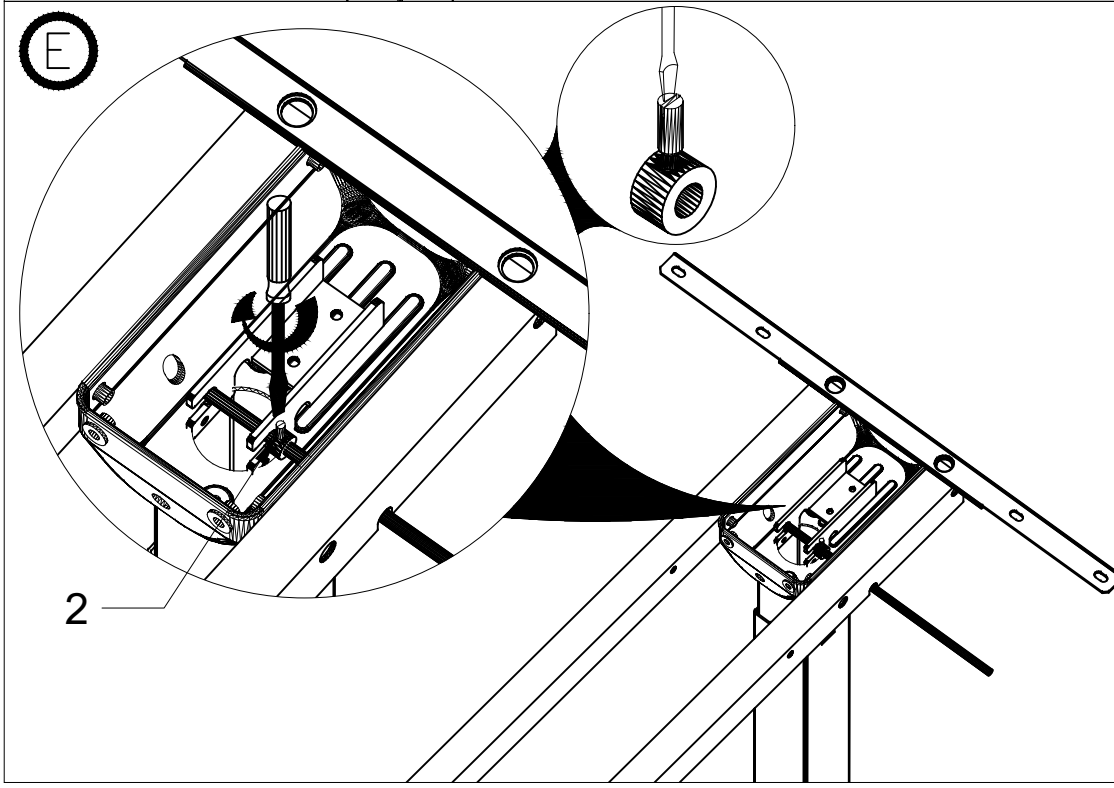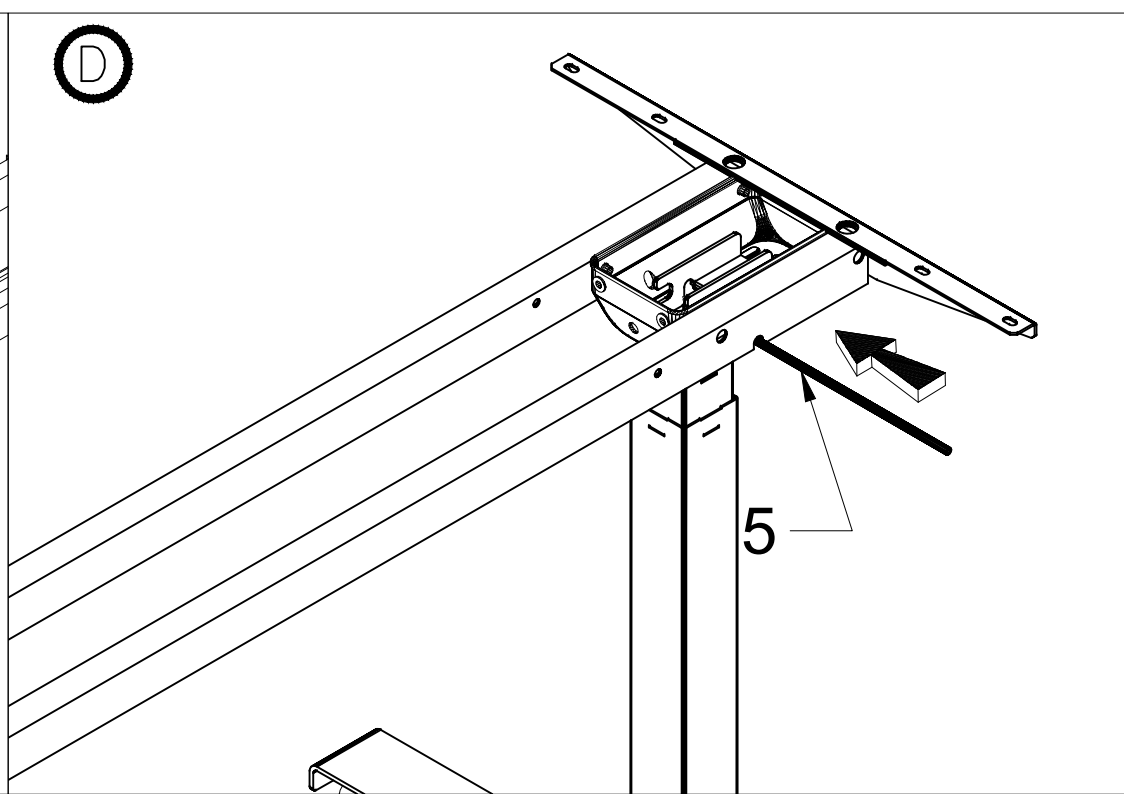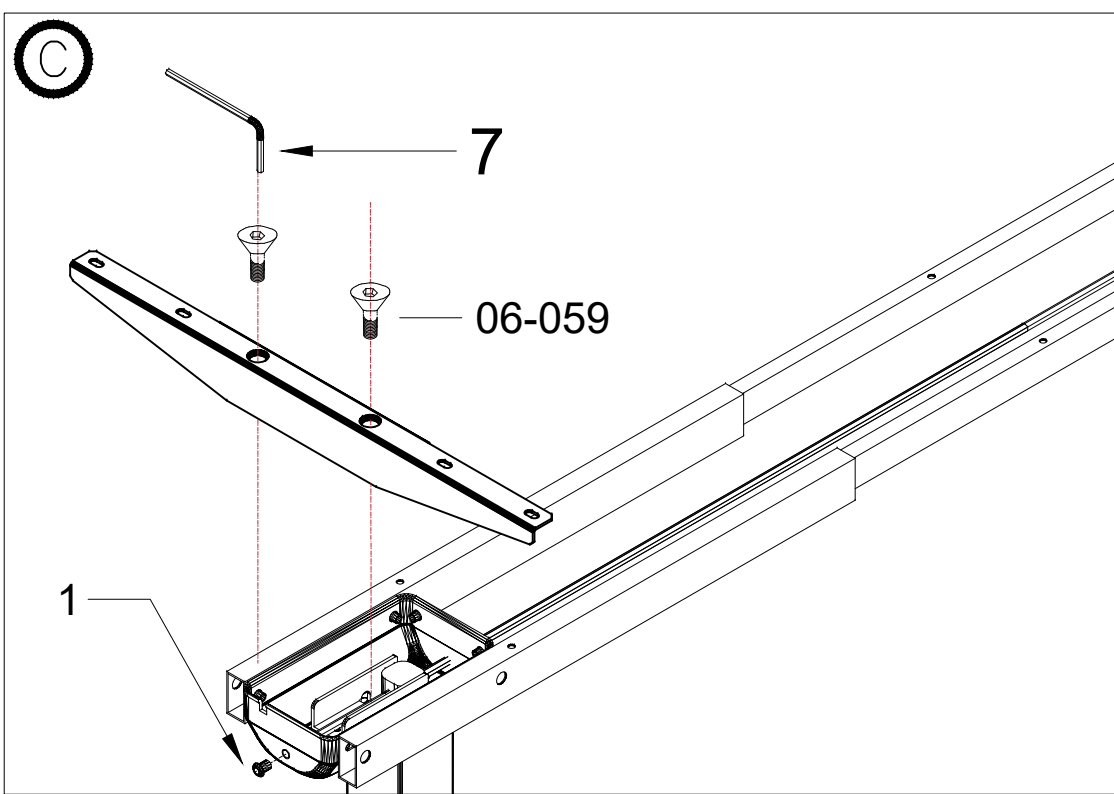

G

